


Frequency Analysis Map

gives an overview of all recorded noise/MiCro sound samples


UWI: 10X/XX-XX/0XX-XXWX/00 (Lic: 0XXXXX)
MiCro Sound Samples (Nov-XX-20XX)
Noise Frequency Spectrum (PSD)

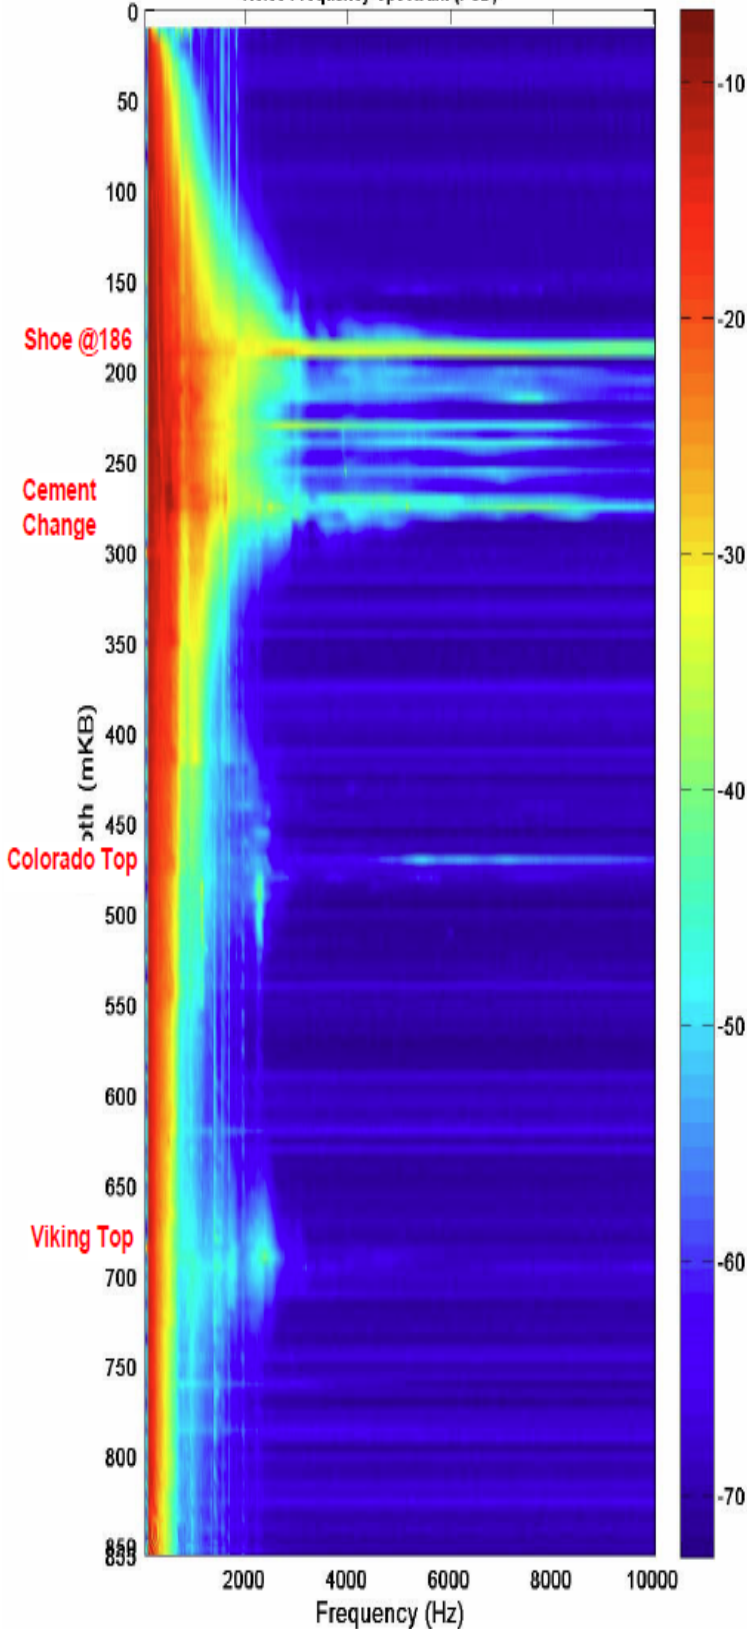

BOREAL E-LINE CAN PROVIDE THE ANSWERS

- Two Noise Tool Options
 - ◆ MiCro Fiber Optic Directional Noise Tool
 - ◆ Conventional Noise Tool
- Add CHAT-RBT to obtain full logging package
 - Assist with Pre-Job well planning - log reviews
 - Customize a SCVF / GM logging program
 - Confirm Bubble test on location
 - Record accurate measurements
- Analyze data & Process Integrated Log Presentation
 - Provide a detailed Interpretation Summary
 - Recommend Perforation interval for intervention
 - Follow up after intervention to confirm results
 - Provide support on future abandonments

MiCro Temp-CHAT-RBT Presentation Example

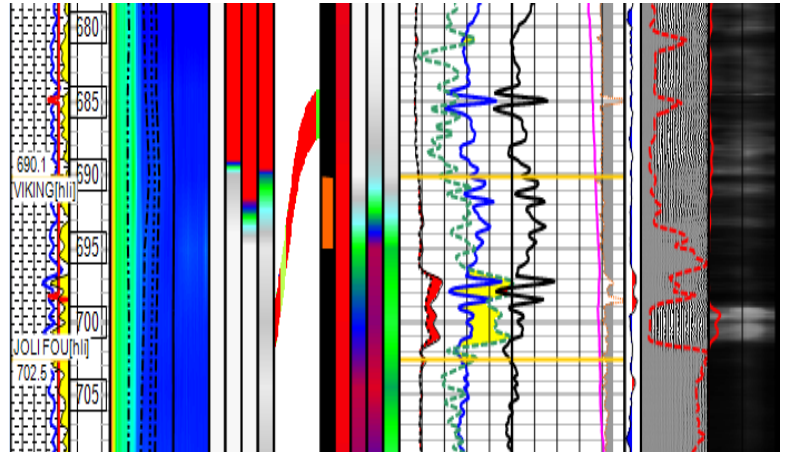

Noise Temp-CHAT-RBT Presentation Example

